

## PORTABLE GAS STOVE

### USER MANUAL

Portable gas stove

Important:

- Read the user manual with assembly and maintenance instructions, so that you know how the appliance works before connecting it to the gas cartridge.
- Keep the manual, so that you can read it again later.
- This appliance can only be used with butane cartridge .
- Always keep the appliance out of reach of children.
- Only use outdoors

Model:

Connection pressure: Butane vapour pressure

Nominal thermal load: 2.06 kW

Gas consumption: 150 g/h

Year of manufacture:

Destination country:

Guarantee:

1. Casing
2. Frame for stove
3. Cover of cartridge holder
4. Windscreen
5. Pan holder
6. Stove
7. Burner head
8. Burner
9. Fixing knob for gas cartridge
10. Control panel
11. Adjustment knob high/low with Piezo ignition

Warning!

After unpacking, the pan holder must be positioned correctly in the appliance.

Do not use a stove with damaged or worn seals.

Safety device:

The cooking stove is provided with an extra safety mechanism that shuts off the gas supply if the pressure in the cartridge increases too sharply, e.g. due to overheating.

The cartridge cannot be fixed in place if the adjustment knob is not in the **OFF** position or if the pan holder is in the transport position.

Before use

1. Once you have taken the pan holder out of the carrying case, put it in the correct position. Note the warning sticker!
2. Open the cover of the cartridge holder (3) and place the cartridge inside with the top towards the front, so that the opening points upwards and fits in the valve guide properly. (Illustration 1)
3. Then push the fixing knob downwards (9). (Illustration 2)
4. Turn the adjustment knob (11) right round to the left, to the **IGNITION** position, until the ignition clicks. (Illustration 3)
5. If ignition does not occur, repeat this procedure.
6. Then set the adjustment knob to the required position. (illustration 4)

If you hear a "hissing" sound, then the cartridge is not properly fixed. If necessary, replace the cartridge in the holder correctly.

#### After use

- 1 Turn the adjustment knob to the **Off**-position and move the fixing knob for the cartridge to **UNLOCK**
- 2 If necessary, you can also move the knob (9) straight to the **UNLOCK**-position.
- 3 For your own safety, always remove the cartridge from the cartridge holder after use.
- 4 Cover the cartridge with a red protective cap and store it in a cool place with adequate ventilation.
- 5 After use, always remove any food or grease residues from the cooking appliance.

#### Warning

- Only use suitable butane cartridges of type for portable gas stove
- Using other cartridges can lead to leakage or damage.
- Never put two cooking stoves right next to each other.
- Do not use pans that cover the cartridge holder.
- Never use the cooking stove without the pan holder!
- Always place the cooking stove on a flat surface.
- After use, always remove any food remnants, particularly grease, from the cooking stove.
- Never use the cooking stove close to inflammable materials.
- The butane cartridges should be replaced in a safe place, such as in the open air or somewhere with good ventilation.
- Never look for gas leaks with a flame, but use soapy water.
- Do not make any alterations to the appliance and do not carry out any repairs yourself.
- In the case of malfunction, you can contact your seller.

#### Troubleshooting

Problem	Solution
No gas	<ul style="list-style-type: none"><li>▪ Check that the cartridge has been placed in the holder properly.</li><li>▪ Gas cartridge is empty.</li><li>▪ Shake the cartridge.</li></ul>
No ignition	Clean burner head with a brush